



REFRIGERATION AND
AIR CONDITIONING

INSTRUCTIONS

EKA 163A / 164A




084R9970




R18KB600

084R9970


084R9970

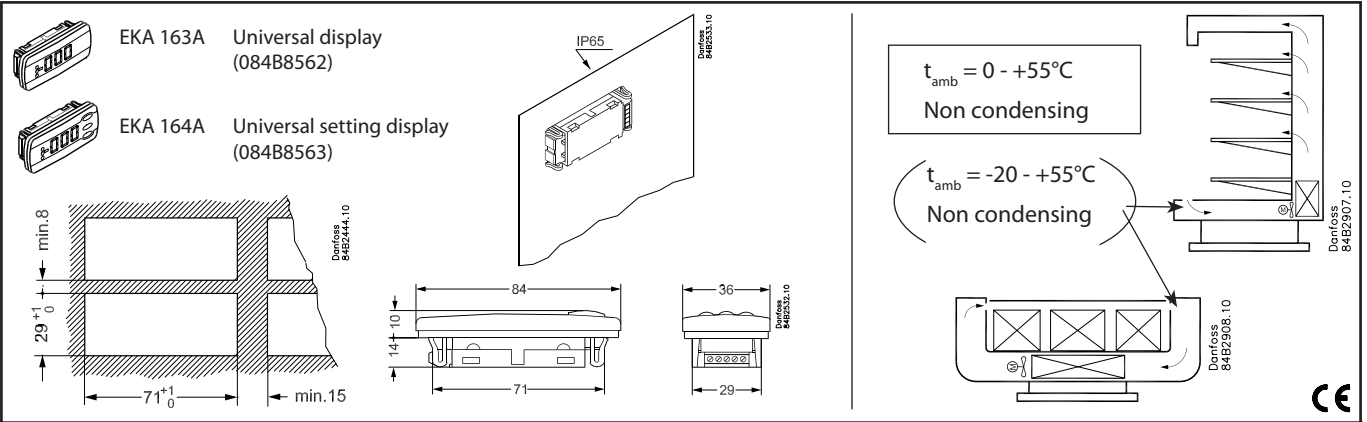


EKA 163A /
EKA 164A → EKC 4xx / EKC 5xx / AK..

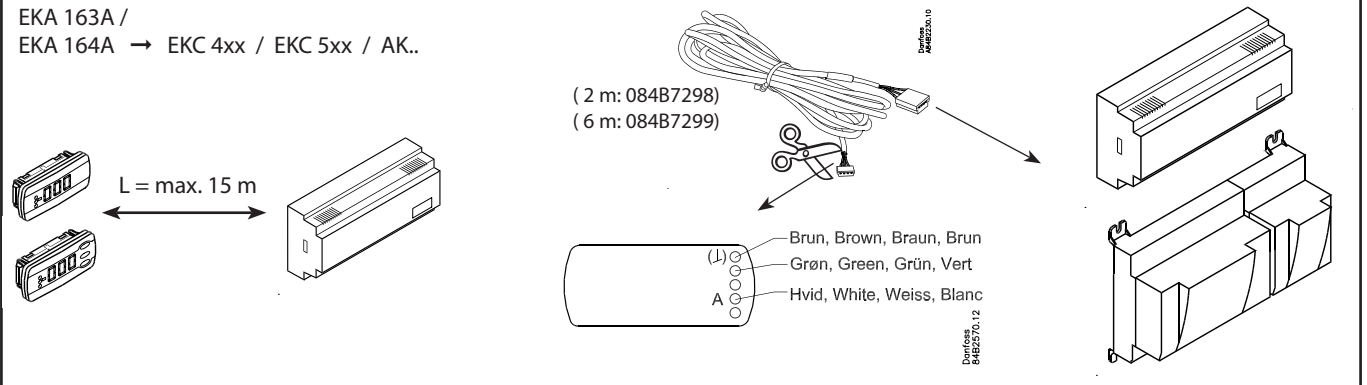

EKA 163A → EKC 202D / 204A1, AK-CC 210

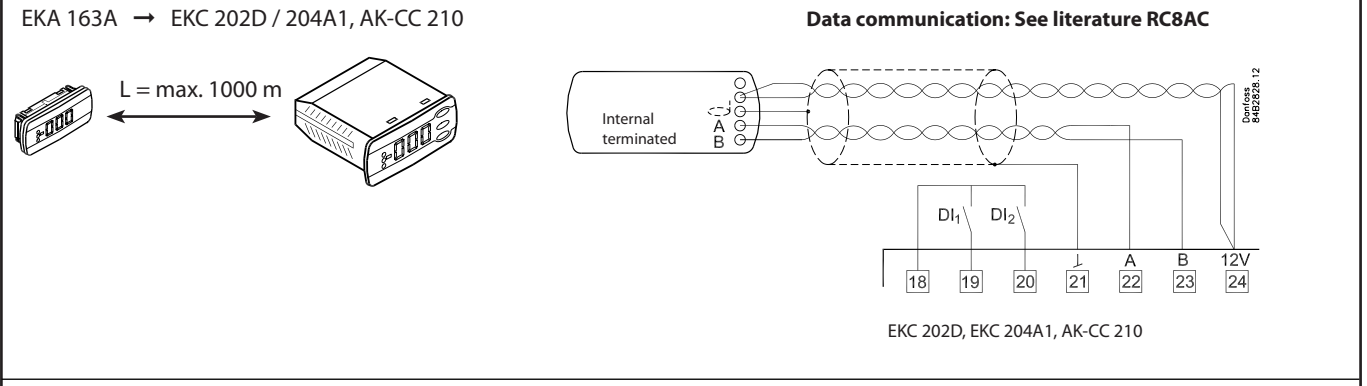

EKA 163A / 164A → AK-CC 450 / 550

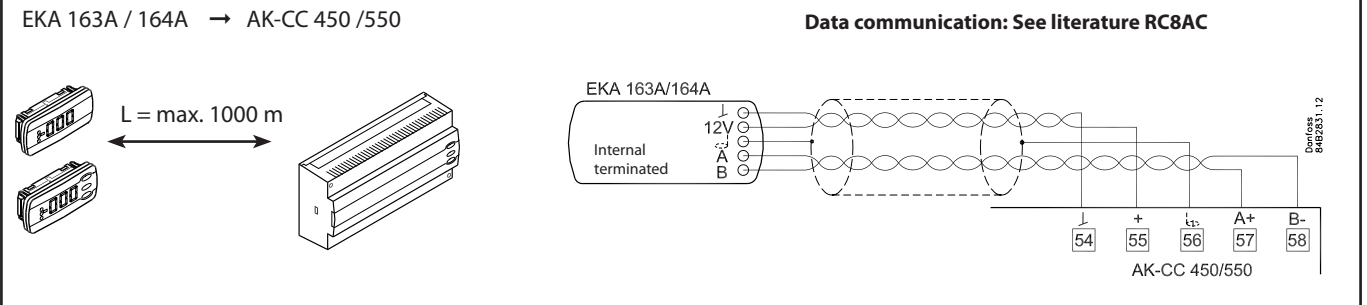

EKA 164A → EKD 316

