 




Instructions

CVMQ



027R9503

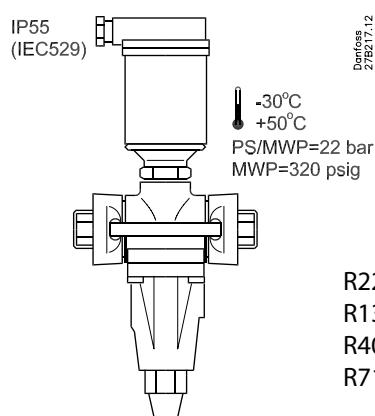


Fig. 1

Danfoss
27B217.12

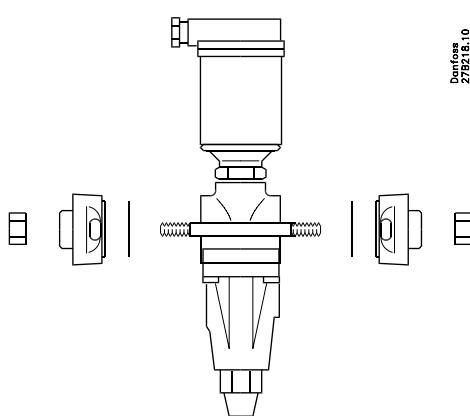


Fig. 2

Danfoss
27B218.10

027R9503

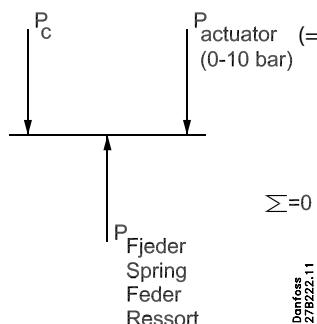


Fig. 3

Danfoss
27B222.11

Fabriksindstilling / Factory setting
Werkseinstellung / Réglage en usine

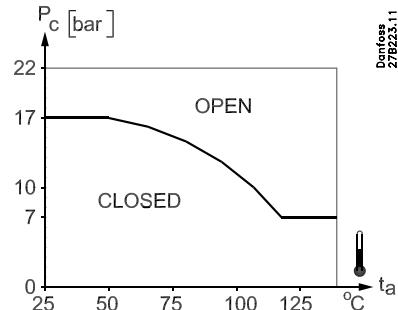


Fig. 4

Danfoss
27B223.11

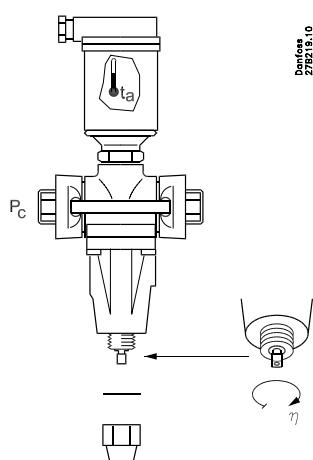


Fig. 5

| P_c [bar] | $\eta = 1 \times 360^\circ = \text{ca. } 2 \text{ bar}$ | Danfoss 27B224.11 |
|-------------|---|----------------------|
| -1 → 9 | X | |
| 7 → 17 | Fabriksindstilling Factory setting Werkseinstellung Réglage en usine | X |
| 12 → 22 | | X |

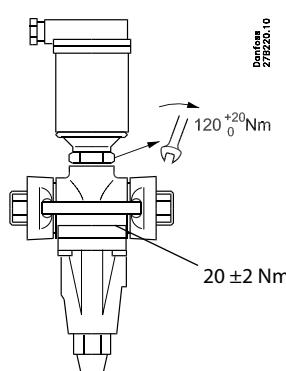


Fig. 6

Danfoss
27B230.10

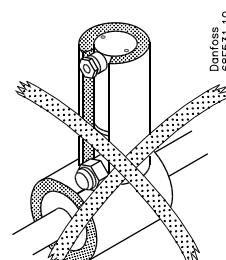


Fig. 7

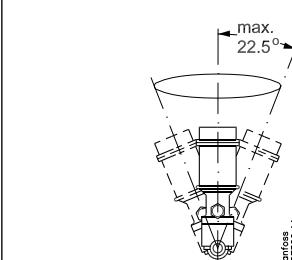


Fig. 8

Danfoss
65F53.10

Danfoss
65F53.11

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed.
All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.