

## Installation Guide

# Pressure Control Types KP 1, KP 2, KP 5, KP 7W, KP 7B


060R9746

### Refrigerants

HCFC and non-flammable HFC

Auto reset:  
KP 1, KP 2, KP 5, KP 7W


Manual reset:  
KP 1, KP 5, KP 7B

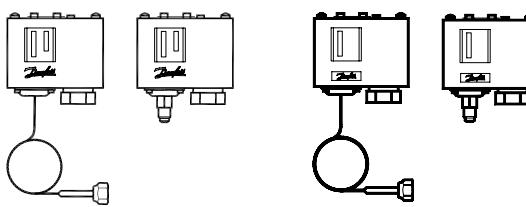

#### CAUTION:

Do not install these controls on ammonia systems.


### Mounting requirements

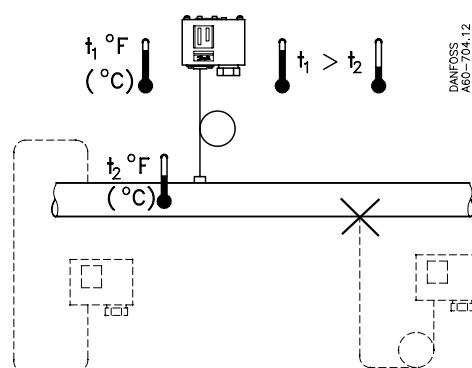

#### CAUTION:

Do not mount the control in a position where dirt, sediment or oil will affect the operation of the control.

### Ambient temperatures

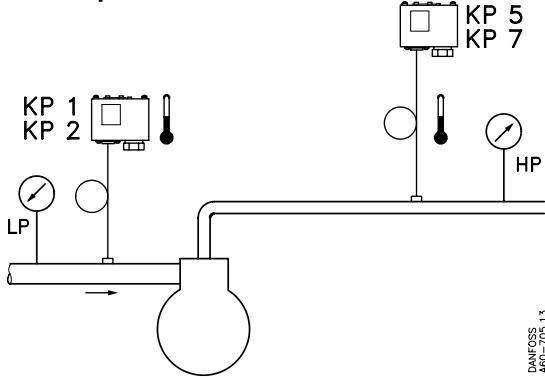


$t_1$  min. KP 1, KP 2, KP 5: -40 °F (-40 °C)


$t_1$  min. KP 7: -13 °F (-25 °C)

$t_1$  max.: 149 °F (65 °C)


### Mounting

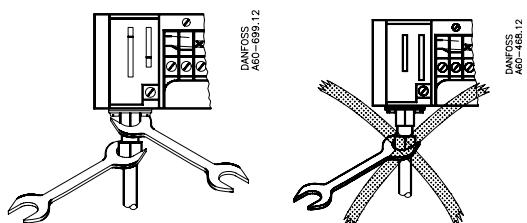

### Connections

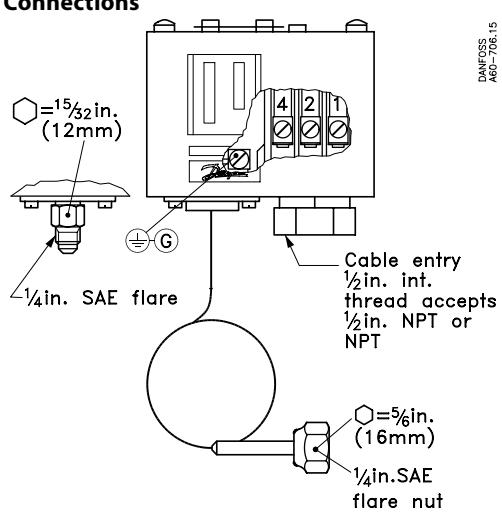

### Test pressure ( $P_{test}$ )

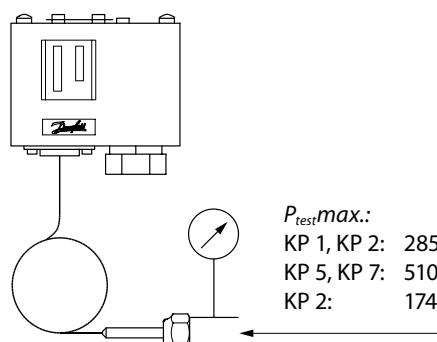


$P_{test,max.}$ :

KP 1, KP 2: 285 psig (20 bar  $p_e$ )

KP 5, KP 7: 510 psig (35 bar  $p_e$ )

KP 2: 174 psig (12 bar  $p_e$ )

### Enclosure

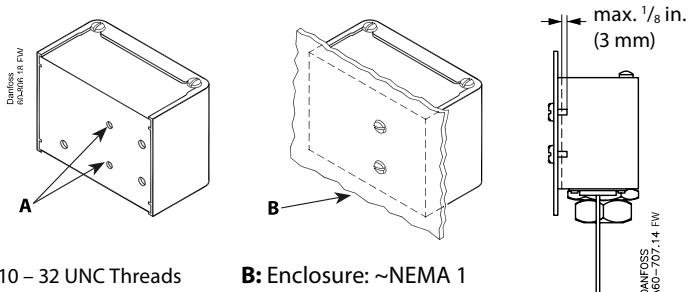

**A:** 10 – 32 UNC Threads

**B:** Enclosure: ~NEMA 1

#### CAUTION:

The mounting panel must be plane to avoid damage of control.


060R9746


**CAUTION:**

Disconnect power supply before wiring connections are made or service to avoid possible electrical shock or damage to equipment. Do never touch live parts with your fingers or with any tool.

**Wiring**


All wiring should conform to the National Electrical Code and local regulations.

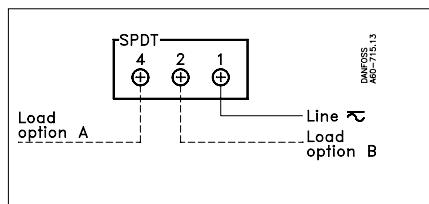**Terminal block**

**Load Option A**

CUT-OUT on pressure drop

Wire terminals 1-4:

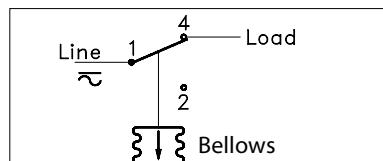
CUT-IN = High Set Point (HSP)  
see "Setting"  
CUT-OUT = Low Set Point (LSP)  
see "Setting"


**Load Option B**

CUT-OUT on pressure rise

Wire terminals 1-2:

CUT-IN = Low Set Point (LSP)  
see "Setting"  
CUT-OUT = High Set Point (HSP)  
see "Setting"

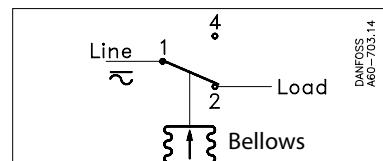
**CAUTION:**

Use terminal screws furnished in the contact block.

Use tightening torque 20 lb. in (2.3 Nm).  
Use copper wire only.

**Contact load ratings**

120 V a.c.	16 FLA, 96 LRA
240 V a.c.	8 FLA, 48 LRA
240 V d.c.	12 W pilot duty

Terms 1-4 close on pressure rise  
Terms 1-4 open on pressure drop

Example:

CUT-IN = 30 psig  
CUT-OUT = 10 psig

This means :

CUT-IN = HSP = 30 psig  
CUT-OUT = LSP = 10 psig



Terms 1-2 close on pressure drop  
Terms 1-2 open on pressure rise

Example:

CUT-IN = 250 psig  
CUT-OUT = 350 psig

This means :


CUT-IN = LSP = 250 psig  
CUT-OUT = HSP = 350 psig

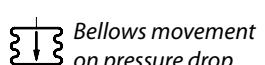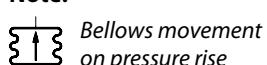**Note:**


The free terminal can be used for signal purpose.

**Manual trip function**


(Electrical contacts / wiring test)

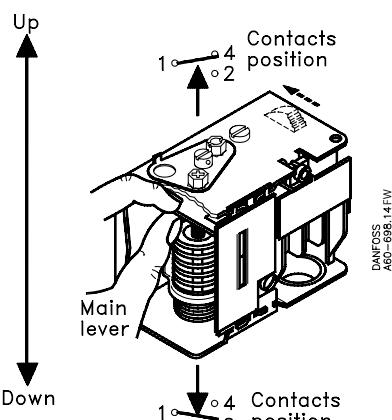

TRIP (main lever)  
use FINGERS ONLY!  
(Do NOT use screwdriver)

**Note:**

KP 1, KP 5 and KP 7B with man. reset:  
Push manual reset knob during  
manual tripping.

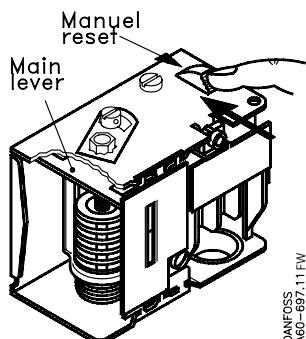**Manual reset**


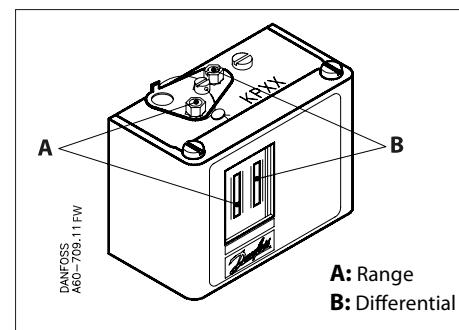
To resume control operation after safety cutout, push reset knob as indicated.

**Note:**


KP 1, man. reset is possible only after a pressure rise of 10 psi (0.7 bar). KP 5 and KP 7B, man. reset is possible only after a pressure drop of respectively 43 psi (3.0 bar) and 58 psi (4.0 bar)

**Adjustment spindle(s) location**

Auto reset KP 1, KP 2, KP 5, KP 7W




Manual reset KP 1, KP 5, KP 7B

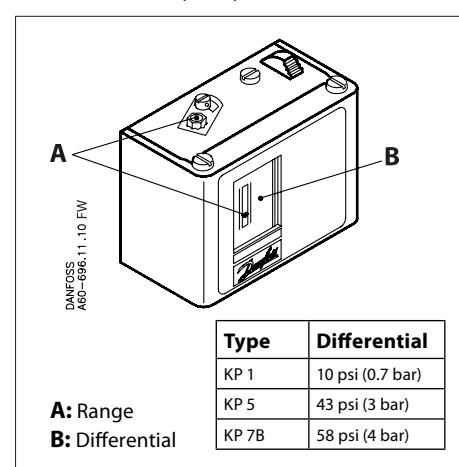

## Setting


(see also "Wiring")

KP 1 (auto reset), KP 2, KP 5, KP 7W, KP 7B

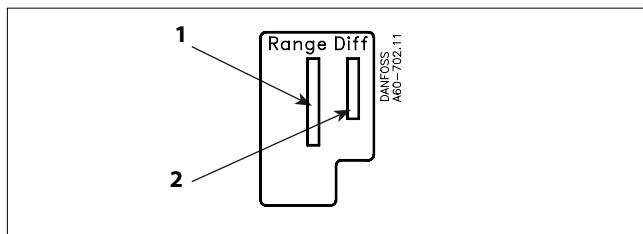

1. Adjust range spindle to desired HIGH SET POINT (HSP)
2. Adjust differential spindle to desired DIFFERENTIAL (DIFF.)

KP 1 (manual reset ONLY)

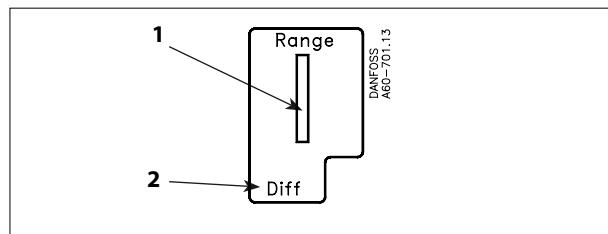

1. Adjust range spindle to desired LOW SET POINT (LSP)
2. DIFFERENTIAL is fixed Value printed on scale plate

### Note:

KP 5 (manual reset) and KP 7B have fixed diff.  
Value printed on scale plate.

HIGH SET POINT minus DIFFERENTIAL equals LOW SET POINT

Example:

$$\begin{array}{rcl} \text{HSP} & - & \text{DIFF.} = \text{LSP} \\ 30 \text{ psig} & - & 20 \text{ psi} = 10 \text{ psig} \\ (2.1 \text{ bar}) & (1.4 \text{ bar}) & (0.7 \text{ bar}) \end{array}$$

LOW SET POINT plus DIFFERENTIAL equals HIGH SET POINT

Example:


$$\begin{array}{rcl} \text{LSP} & + & \text{DIFF.} = \text{HSP} \\ 12 \text{ psig} & + & 10 \text{ psi} = 22 \text{ psig} \\ (0.8 \text{ bar}) & (0.7 \text{ bar}) & (1.5 \text{ bar}) \end{array}$$

If terminals 1-4 are used: CUT-IN = HSP  
CUT-OUT = LSP

If terminals 1-2 are used: CUT-IN = LSP  
CUT-OUT = HSP

## Adjustment

See instruction printed on top of control

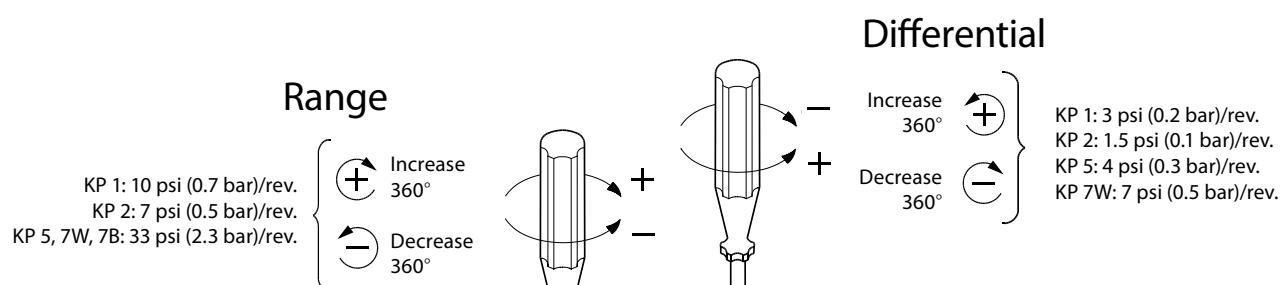

### Note:

Remove lockplate before adjustment.  
Replace lockplate after adjustment (if desired).